


## 15. Glove Box


### A: REMOVAL

- 1) Remove the front door scuff plate and front pillar lower trim. <Ref. to EI-45, REMOVAL, Side Trim.>
- 2) Remove the instrument panel side cover RH.

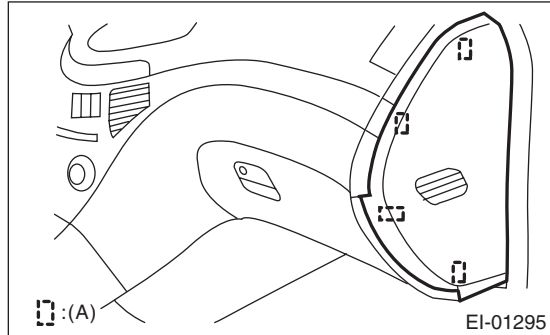


(A) Hook

- 3) Remove the console side panel lower RH.

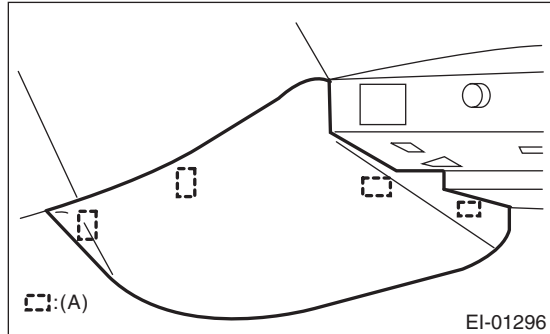


(A) Hook


- 4) Remove the clips, and remove the glove box lower cover.

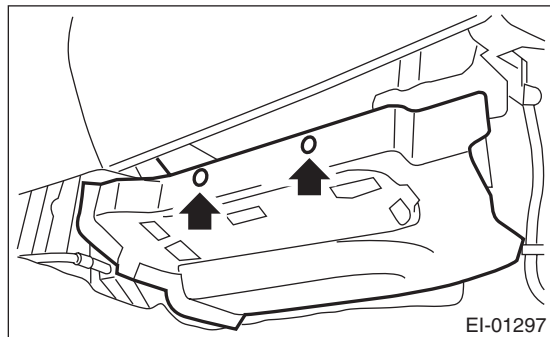

- 5) Remove the screws (A) and hooks (B), and disconnect the connector, and then remove the glove box assembly.

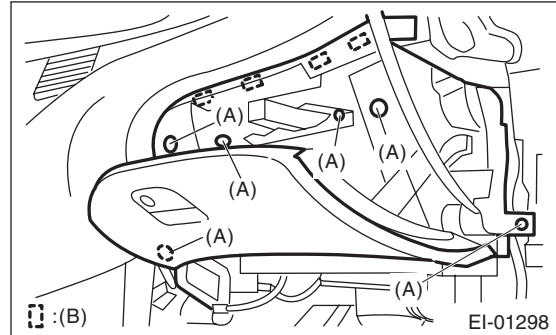

- 6) Remove the clip (A) in the glove box and damper strap.

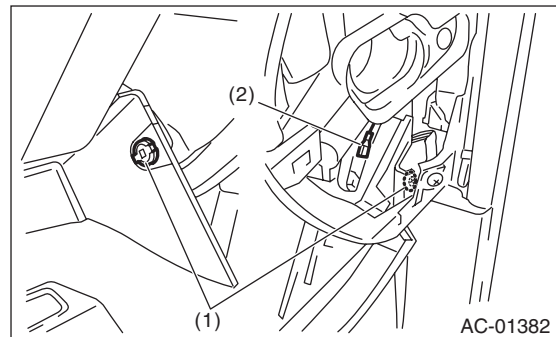

- 7) Remove the left and right stoppers of glove box lid, and then remove the glove box lid.

### NOTE:

The glove box lid can be removed without using the glove box assembly.

### B: INSTALLATION

Install in the reverse order of removal.